



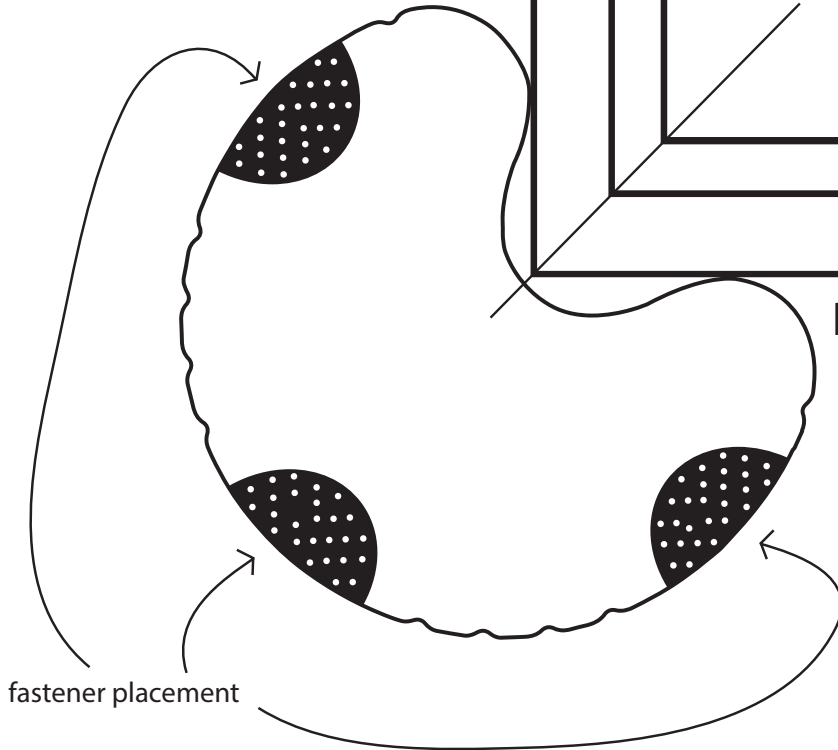


90° corner



### Recommended Fasteners

(subject to local building codes)

- |    |  |
|----|--|
| 1. | <br>1 1/4" staple         |
| 2. | <br>1 1/4" roofing nail   |
| 3. | <br>1" wafer head screw |

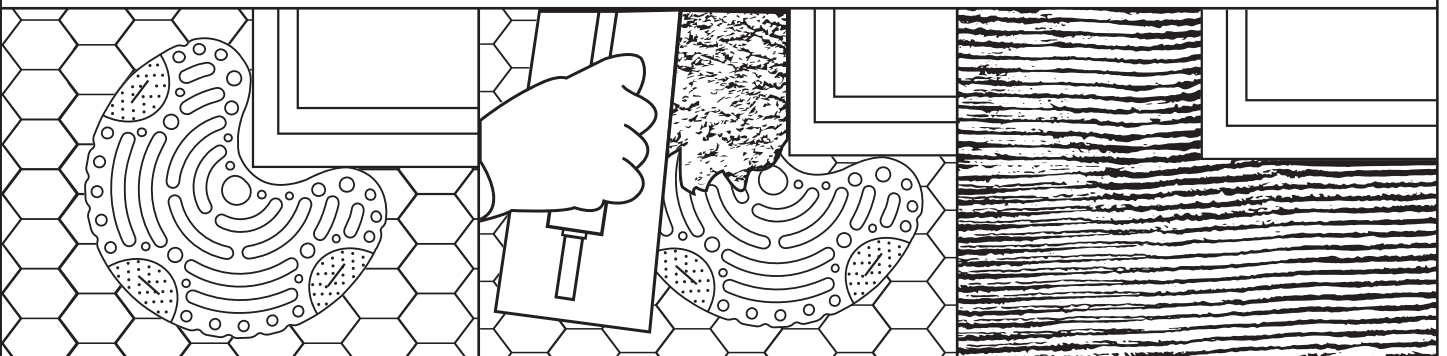

**Step 1:** Secure the PlastiCorner at a 90° corner over building paper and one layer of lath at the three designated flanges with the appropriate fasteners.

**Step 2:** Apply scratch coat evenly over and around the PlastiCorner making sure to penetrate all openings with cement until it is completely embedded.

**Step 3:** Score the scratch coat over the PlastiCorner ensuring that it is entirely buried. It is important that the product is not visible after this step.

Ensure that the wall is free from structural defects. For PlastiCorners to be most effective, it is important that all lath and plaster products and window and door frames are installed according to local building codes and manufacturers' installation instructions.